

Gate operation unloading pits

ennatuurlijk aardwarmte

Check the signal light on the gate

- Unloading pit is full, use another!
- Unloading pit available



● Push the green button to open the gate

- The crane is sent away from the pit
- The gate opens once the crane is at a safe distance
- Unload your cargot



● Push the red button to close the gate



● Important: push the blue button to indicate that the crane can come back to the pit

This way, the unloading pit can be emptied for a colleague with the next load.



- Don't forget to check your unladen weight.
Thank you, and have a safe trip!



Beware of fall hazard; it is strictly forbidden:

- To enter the unloading pits
- To stand, lean or sit on the concrete edge of the unloading pit;
- To extend head, arms, legs or other body parts past the concrete edge.